

P01.00-2347-09

- 1 Release plug (1) and disconnect from the ME-SFI [ME] control unit (N3/10).
- 2 Detach electrical connector (2).
- 3 Detach ground line (3) from vehicle body.
- 4 Unscrew heat shield (4) and disconnect tml. 30 connection (5) for the starter.

- 5.1 Transmission 722  
Unscrew heat shield (6) and detach electronic transmission control connector (X 22/19).

- 6.1 Transmission 716  
Detach the backup lamp switch connector.


- 7 Unscrew the transmission ground (W49).

- 8.1 Disconnect plug (8) from gas rail.

**i** Only for bivalent natural gas drive, Code 924

- 9.1 Disconnect plug (9) of CNG control unit.

**i** Only for bivalent natural gas drive, Code 924

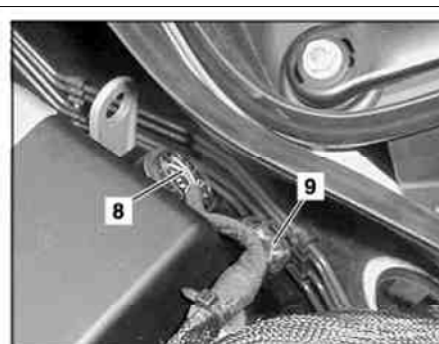

P01.00-2542-06