

MODEL 211.0 /2 /6

When removing the left and right front lamp unit



P82.10-2968-07

Shown on left front lamp unit

- 1 Bolt (with code (600a) headlamp cleaning system)
2 Screw

- E1 Left front lamp unit
E2 Right front lamp unit

Modification notes

14.1.04	Disconnect/connect/remove ground lead from battery		
---------	--	--	--

	Remove/Install		
1.1	Switch off ignition and remove transmitter key from EIS control module	On vehicles with code (614) bi-xenon headlamp unit or with code (615a) bi-xenon headlamp unit with integrated cornering lamps On vehicles with code (889) Keyless go: Press keyless go start/stop button repeatedly until the ignition is switched off. Remove the transmitter key from the vehicle and store it in a location beyond its transmission range (min. 2 m).	
2	Remove front bumper		AR88.20-P-2000T
3.1	Unscrew bolt (1)	In vehicles with code (600a) headlamp cleaning system	
4	Unscrew bolts (2)		
5	Remove left front lamp unit (E1) from the front until the electrical connectors on the left front lamp unit (E1) are accessible		
6	Disconnect electrical connectors from the left front lamp unit (E1) and remove left front lamp unit (E1)		
7	Remove right front lamp unit (E2) from the front until the electrical connectors on the right front lamp unit (E2) are accessible		
8	Disconnect electrical connectors from the right front lamp unit (E2) and remove right front lamp unit (E2)		
9	Install in the reverse order		
10	Check adjustment of left front lamp unit (E1) and right front lamp unit (E2), correct if necessary		
AP	Check and correct headlamp setting		AP82.10-P-8260T