


MODEL 211.0 /2 /6

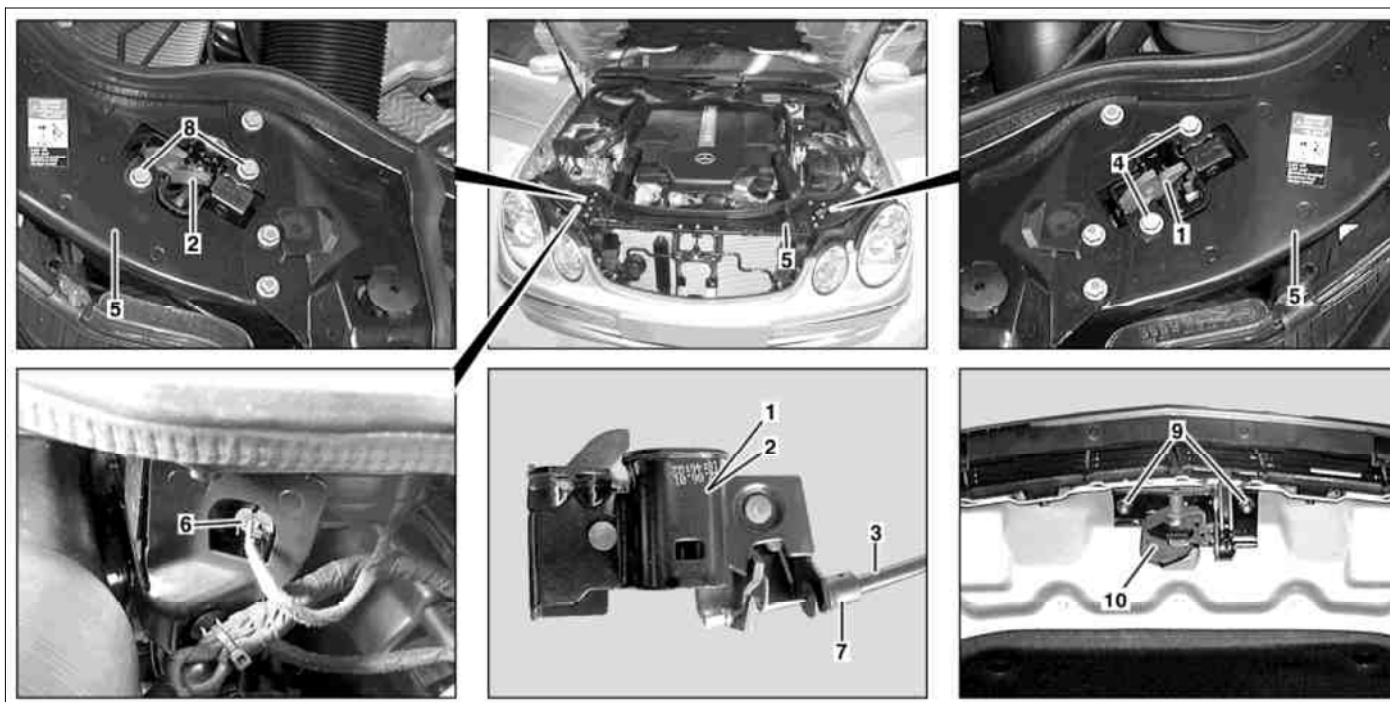

P88.40-2240-09

- 1 Left engine hood catch
2 Right engine hood catch
3 Release cable
4 Bolts

- 5 Radiator cross member
6 Electrical connector (with code (551a) Anti-theft alarm system (ATA))

- 7 Outer sleeve mount
8 Bolts
9 Nuts
10 Safety hook

Modification notes

28.1.04	Disconnect/connect ground line on battery		
---------	---	--	--

	Remove/Install		
Danger!	Risk of injury to fingers being jammed or pinched when Remove/install or aligning hoods, doors, trunk lid/tailgate or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Open engine hood	See Operating Instructions	
2	Unhook release cable (3) from left engine hood catch (1)		
3	Unscrew bolts (4) and remove left engine hood catch (1) from radiator cross member (5) upward		*BA88.40-P-1003-01A
4.1	Disconnect electrical connector (6) from right engine hood catch (2)	On vehicles with code (551a) Anti-theft alarm (ATA)	
5	Unclip outer sleeve mount (7) from release cable (3) on right engine hood catch (2)		
6	Unscrew bolts (8) and remove right engine hood catch (2) from radiator cross member (5) upward		*BA88.40-P-1003-01A
7	Unhook release cable (3) from right engine hood catch (2) and remove right engine hood catch (2)		
8	Unscrew nuts (9) and remove retaining hook (10)		*BA88.40-P-1009-01A
9	Install in the reverse order		

Engine hood

Number	Designation		Model 211
BA88.40-P-1003-01A	Bolt to engine hood catch	Nm	8

BA88.40-P-1009-01A	Bolt, safety hook to engine hood	Nm	8
--------------------	----------------------------------	----	---