


**MODEL 211.0**

- 1 Rear center section trim  
 2 Spare wheel well cover  
 3 Expansion rivet


 
- E18/4 Right luggage compartment lamp  
 E18/5 Left luggage compartment lamp

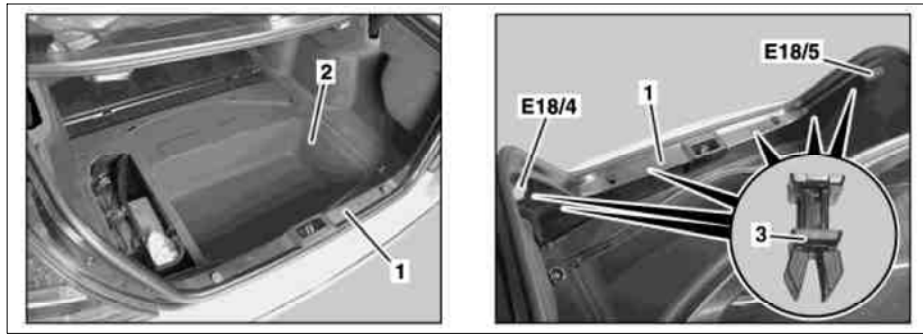

P68.30-2486-04

**Modification notes**

|        |  |  |  |
|--------|--|--|--|
| 8.1.04 | Disconnect/connect/remove ground lead from battery |  |  |
|--------|--|--|--|

|  | Remove/Install  |   |  |
|--|---|---|--|
| 1  | Switch off right luggage compartment lamp (E18/4) and left luggage compartment lamp (E18/5) by locking trunk lid lock with suitable screwdriver |  <b>Installation:</b> Actuate opening handle on outer trunk lid to unlock trunk lid lock |  |
| 2  | Remove right luggage compartment lamp (E18/4) and left luggage compartment lamp (E18/5)   |   |  |
| 3  | Remove expansion rivets (3) and remove rear center section trim (1) from trunk  |   |  |
| 4  | Install in the reverse order  |   |  |