

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9

A

B

C

D

E

F

G

H

J

K

L



CAN B

N73

A1

PE 54.21-P-2104DA

 PE 54.30-P-2101DA

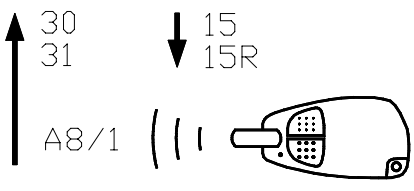


CAN C

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9



CAN B

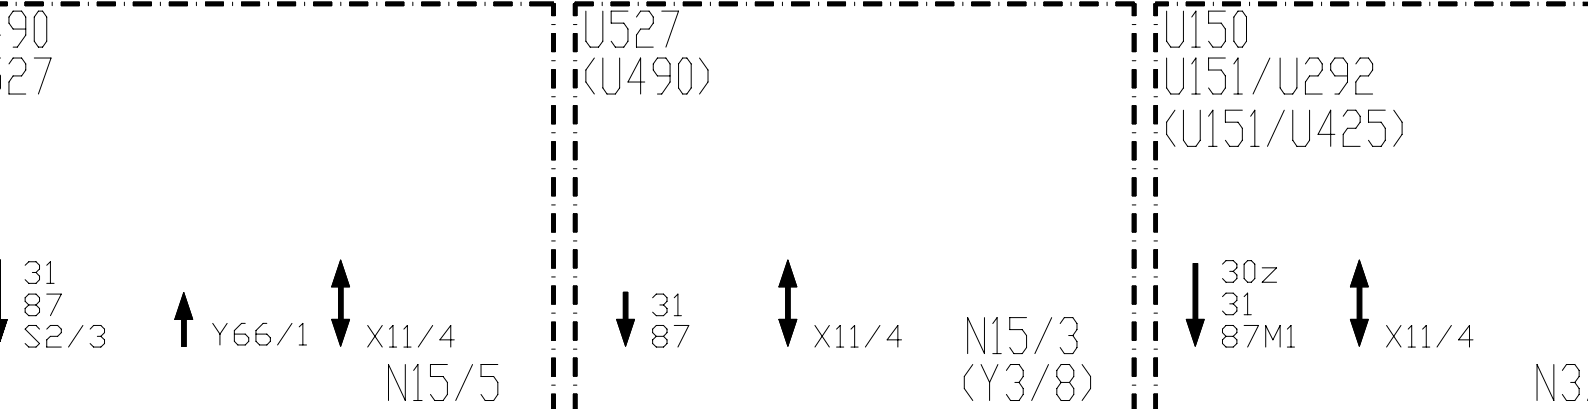


PE 27.19-P-2102DA

PE 27.19-P-2101DA
PE 27.19-P-2101DB


PE 07.61-P-210
PE 07.61-P-210


CAN C


CAN B

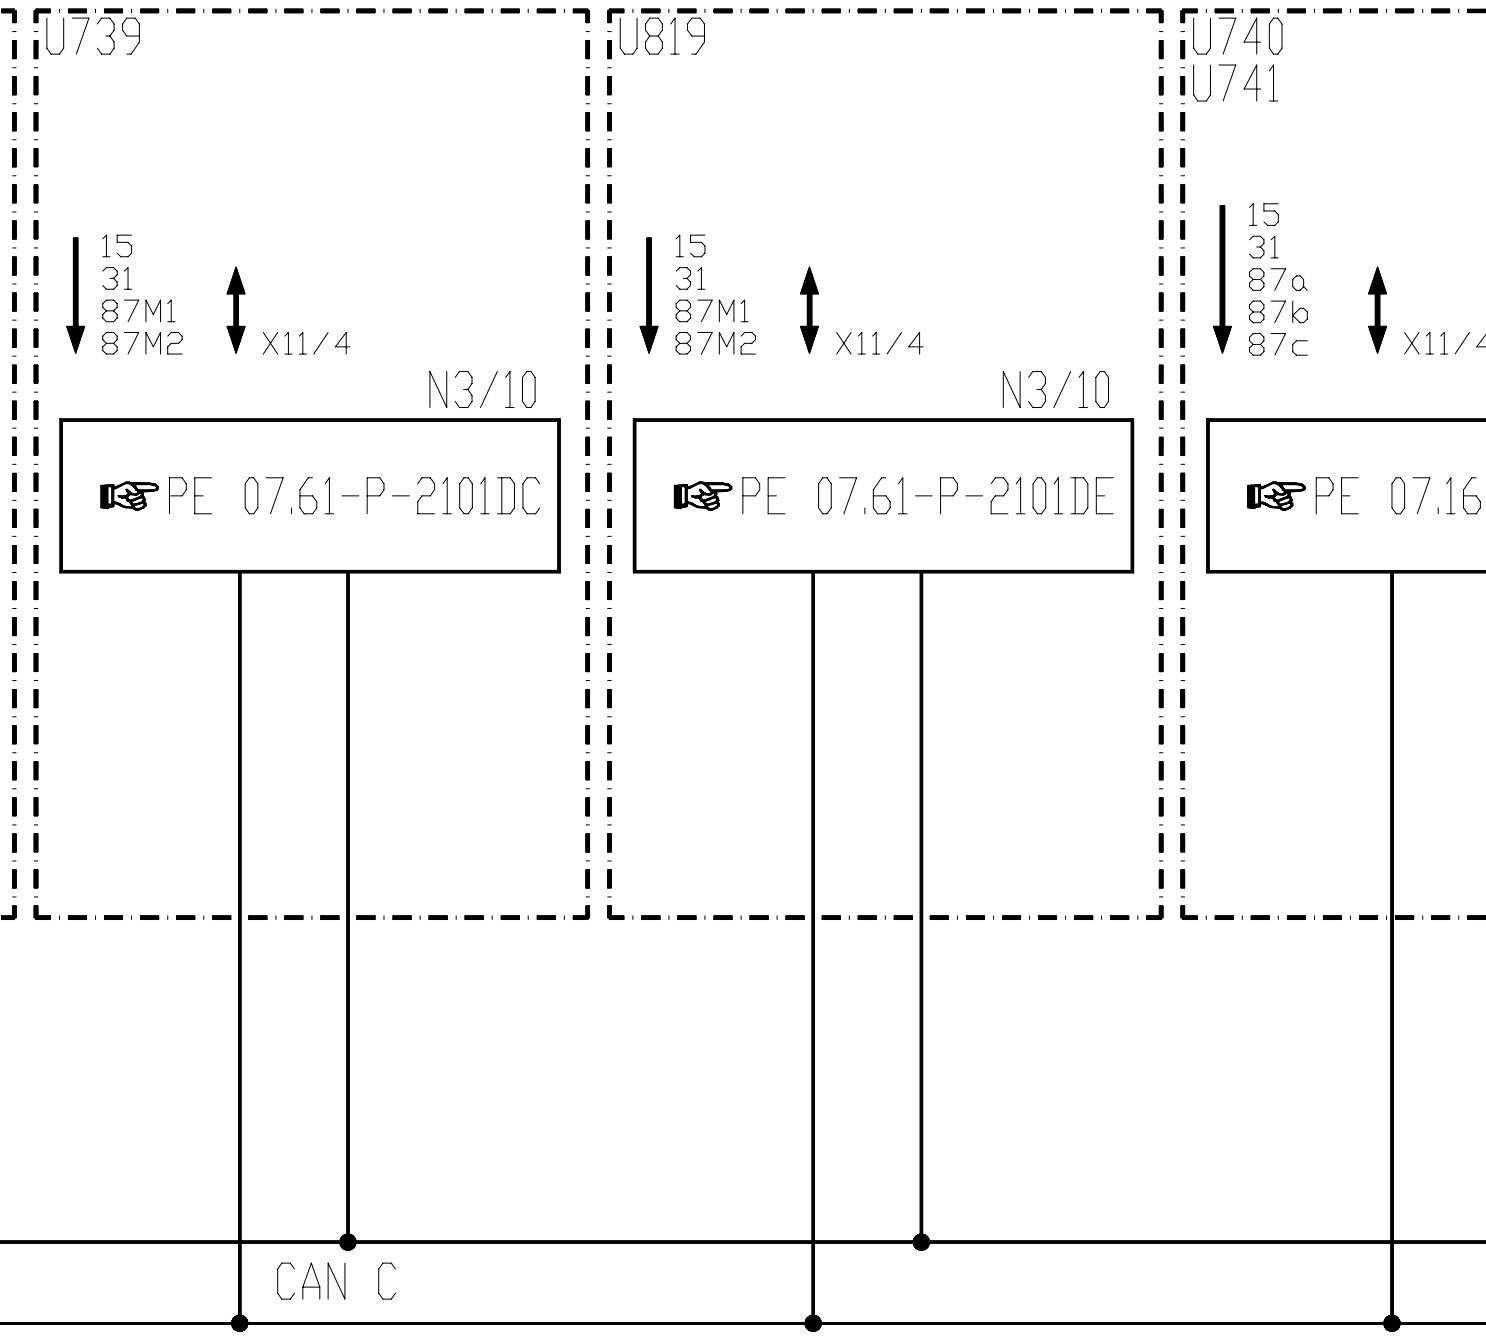


CAN B

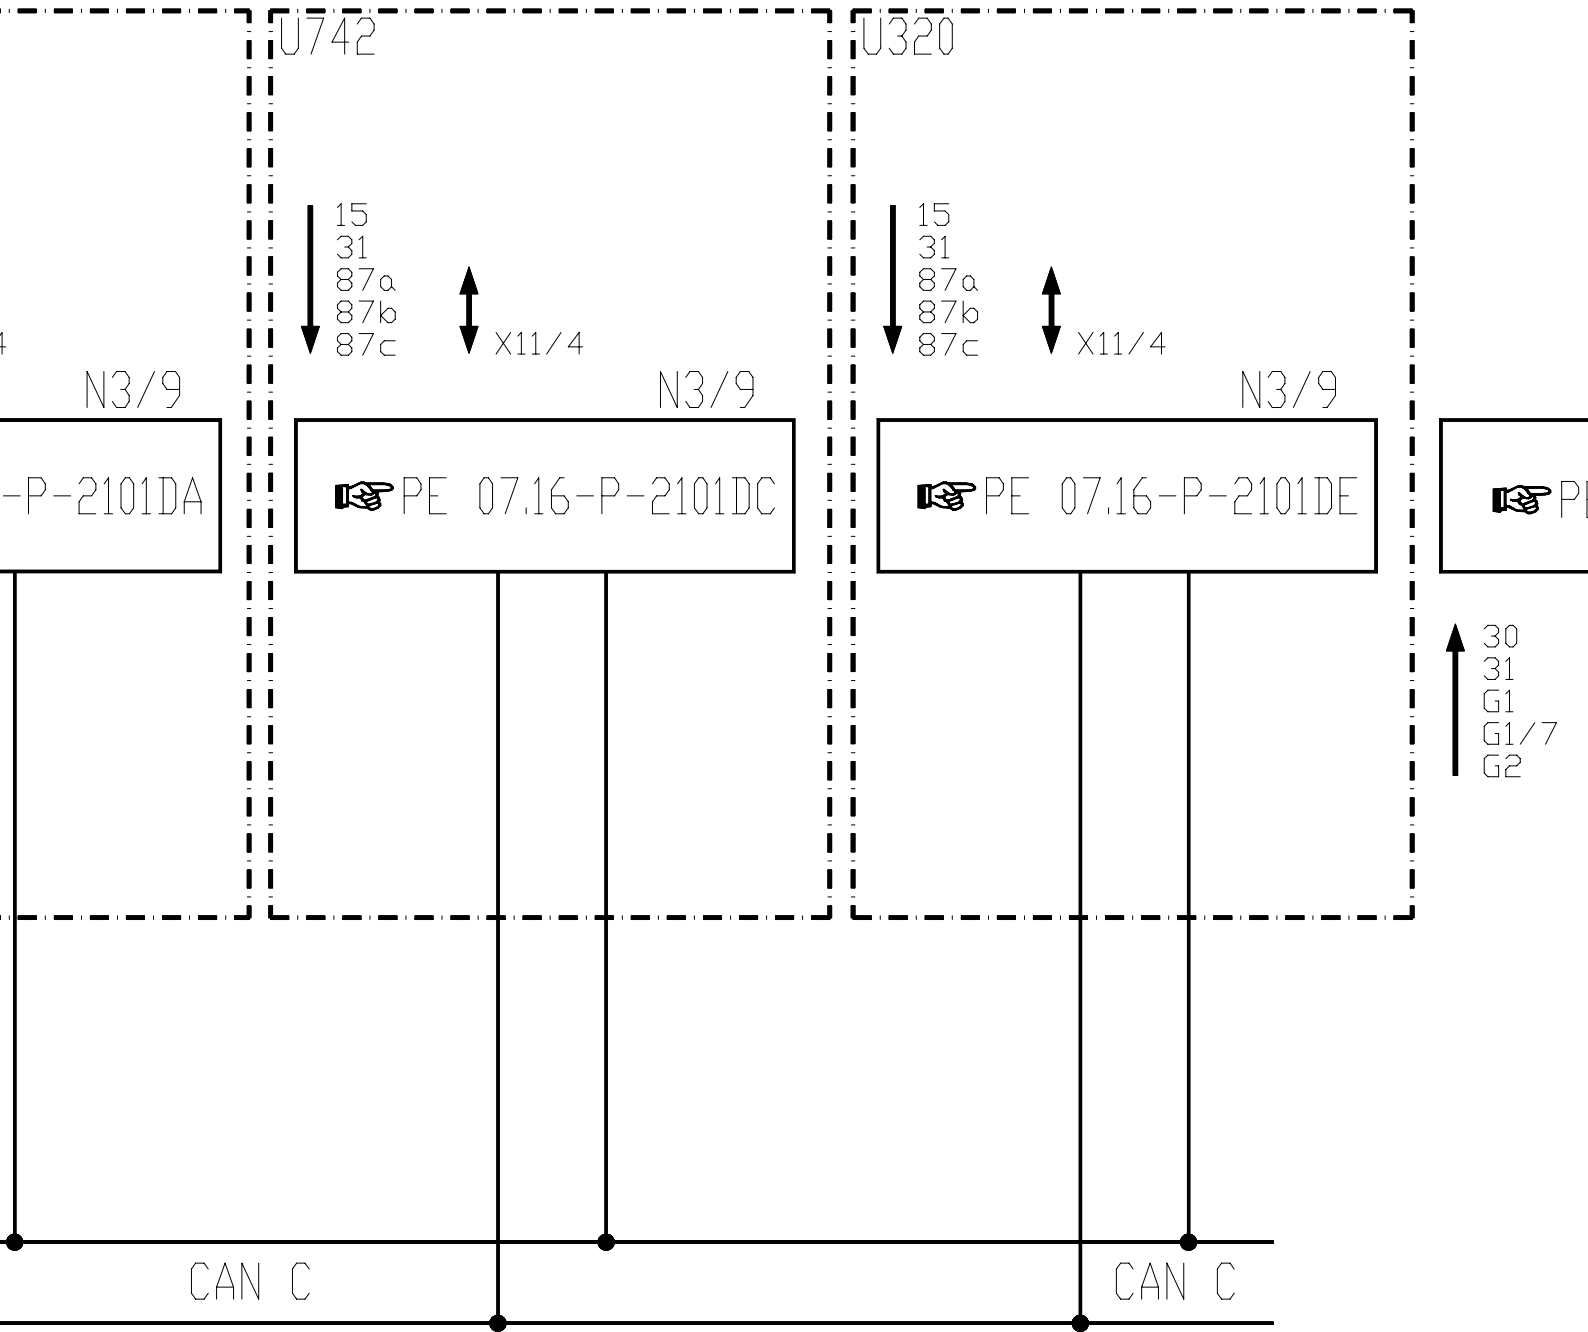

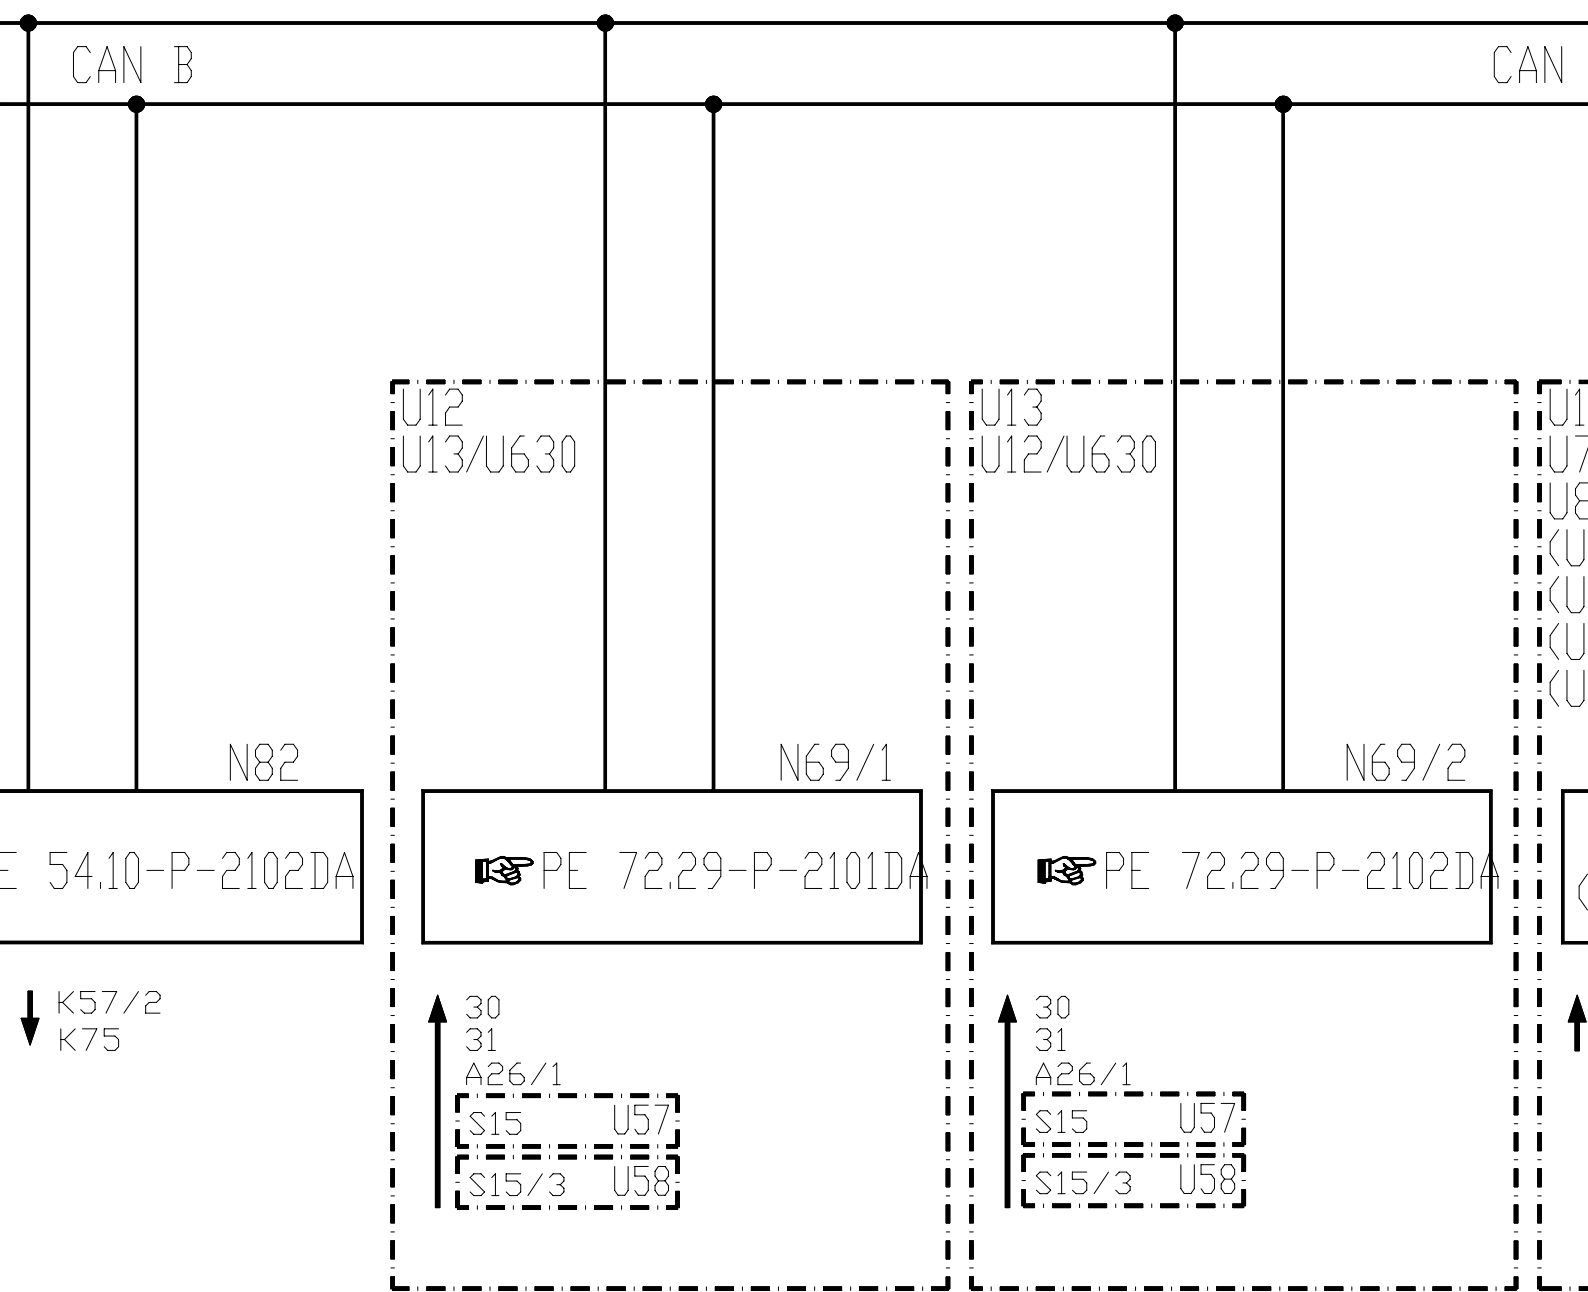

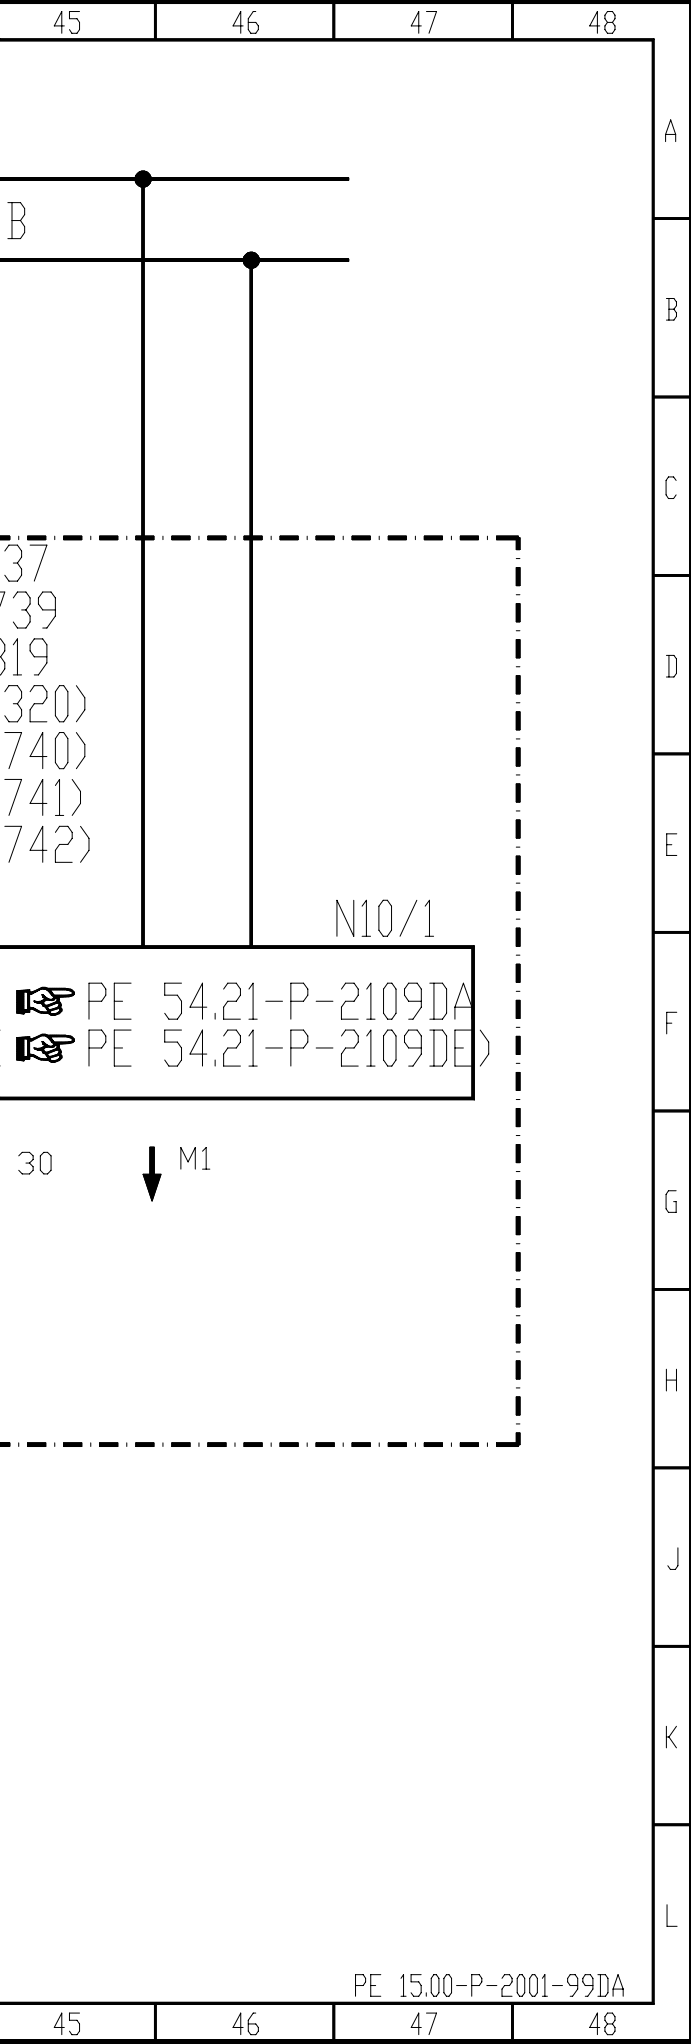

PE15.00-P-2001-60DA	Legend of block diagram of starter, alternator, battery	ENGINE 112, 113, 271, 272, 628, 646, 647, 648 in MODEL 211	
---------------------	---	--	--

 Code	Designation	Coordinate
A1	Instrument cluster	8E
A1p13	Multifunction display	7G
A8/1	Transmitter key	2G
A26/1	Left front IR receiver	38G 42G
G1	Battery	35G
G1/7	Additional battery	35G
G2	Alternator	35H
K57/2	Additional battery relay	36G
K75	Cutoff relay for interruptible loads	36G
M1	Starter	46G
N3/9	CDI control unit	27E 31E 34E
N3/10	ME control unit	18E 21E 24E
N10/1	Driver-side SAM control unit with fuse and relay module	47F
N15/3	ETC [EGS] control unit	14E
N15/5	Electronic selector lever module control unit	11E
N69/1	Left front door control unit	40F
N69/2	Right front door control unit	43F
N73	EIS [EZS] control unit	4E
N82	Battery control unit	37F
S2/3	Keyless Go start/stop button	9E
S15	Remote rear-end door opening switch	38G 42G
S15/3	Trunk lid open/close switch, driver	38H 42H
U12	Valid for left-hand drive vehicles	38D 41D
U13	Valid for right-hand drive vehicles	38D 41D
U57	Valid for station wagon	39G 42G
U58	Valid for sedans and LWB sedans	39H 42H
U137	Valid for engine 112 and 113	44D
U150	Valid for engine 112	16D
U151	Valid for engine 113	16D 16D
U292	Valid for all except E 55 AMG	16D
U320	Valid for engine 628	32D 44D
U425	Valid for E 55 AMG	16D
U490	Valid for 7-speed automatic transmission	9D 12D
U527	Valid for electronic transmission control (ETC [EGS])	9D 12D
U630	Valid for  and 	38D 42D
U739	Valid for engine 271	19D 44D
U740	Valid for engine 646	25D 44E
U741	Valid for engine 647	25D 45E
U742	Valid for engine 648	28D 44E
U819	Valid for engine 272	22D 44D

X11/4	Data link connector	11E 14E 17E 20E 23E 26E 30E 33E
Y3/8	Electric control unit (VGS)	15E
Y66/1	Reversing and parking lock locking solenoid	10E