


MODEL 211.0 /2 /6

with CODE (614) Bi-xenon headlamp unit

with CODE (615a) Bi-xenon headlamp unit with integrated cornering lamps

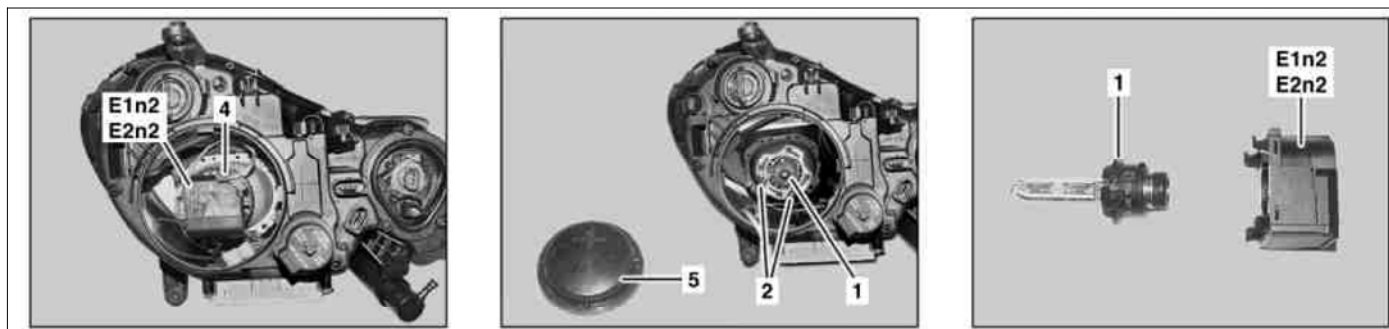

P82.10-2986-07

1 Gas discharge lamp
2 Retaining springs

4 Electrical connector
5 Cover

E1n2 Xenon headlamp ignition module
E2n2 Xenon headlamp ignition module

Modification notes

| | | | |
|---------|---|--|--|
| 20.1.04 | Disconnect ground cable on battery, connect | | |
|---------|---|--|--|

| | | | |
|----------------|--|---|--------------------|
| | Remove | | |
| Danger! | Risk of Death. High voltage at Xenon headlamps may result in death. | Do not touch parts which conduct high voltages. Persons with electronic implants (e.g. pacemakers) should never work on xenon headlamps. | AS82.10-Z-0001-01A |
| 1 | Remove cover (5) on Xenon headlamp | | |
| 2 | Turn to release Xenon headlamp ignition module (E1n2) or Xenon headlamp ignition module (E2n2) on Xenon headlamp and then remove | Carefully remove Xenon headlamp ignition module (E1n2) or Xenon headlamp ignition module (E2n2), otherwise the locking lugs could be damaged. Electrical connector (4) is unplugged automatically. | |
| 3 | Release retaining springs (2) | | |
| 4 | Remove gas discharge lamp (1) | Do not touch the gas discharge lamp (1) with your bare fingers but do so using a grease-free, soft cloth | |
| 5 | Check power supply contact points for corrosion | If necessary, replace corroded part. | |
| | Install | | |
| 6 | Insert gas discharge lamp (1) into Xenon headlamp and hold in place | Do not touch the gas discharge lamp (1) with your bare fingers but do so using a grease-free, soft cloth Installation: Ensure that they are installed in the correct position (notch). | |
| 7 | Lock retaining springs (2) | | |
| 8 | Mount Xenon headlamp ignition module (E1n2) or Xenon headlamp ignition module (E2n2) and lock in place by turning | Note correct installation positions. | |
| 9 | Connect electrical connector (4) | | |
| 10 | Fit xenon headlamp cover (5) | Check seal in cover (5) for signs of damage and wear, if necessary, replace seal in cover (5). | |
| 11 | Perform function check | | |