


MODEL 211.0 /2 /6

- 1 Protective molding  
2 Bolt

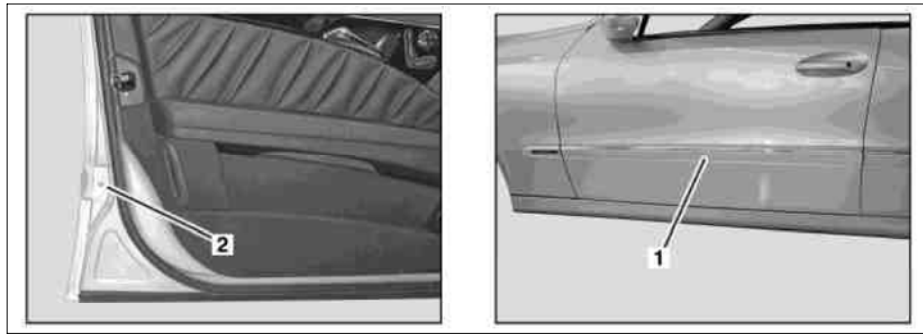

P88.80-2034-04

☒ ☒	Remove/Install		
1	Open front door		
2	Unscrew screw (2)		
3	Slide protective molding (1) toward rear and remove		
4	Install in the reverse order		