


MODEL 211.0 /2

Shown on Model 211.0

- 1 Protective molding
2 Bolt

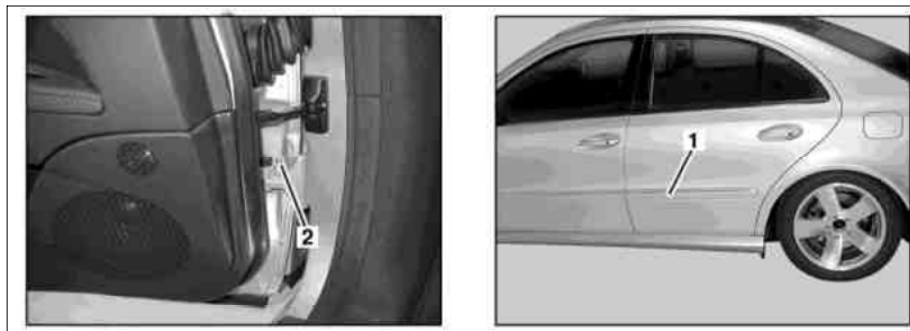

P88.80-2035-04

☒ ☒	Remove/Install		
1	Open rear door		
<p>⚠ Danger!</p> <p>2</p>	<p>Risk of injury to fingers being jammed or squeezed when removing and installing or aligning hoods, doors, trunk lid/tailgate or sliding roof.</p> <p>Unscrew screw (2)</p>	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
3	Close rear door		
4	Slide protective molding (1) toward front and remove from rear door		
5	Install in the reverse order		