


MODEL 211.0/ 2/ 6

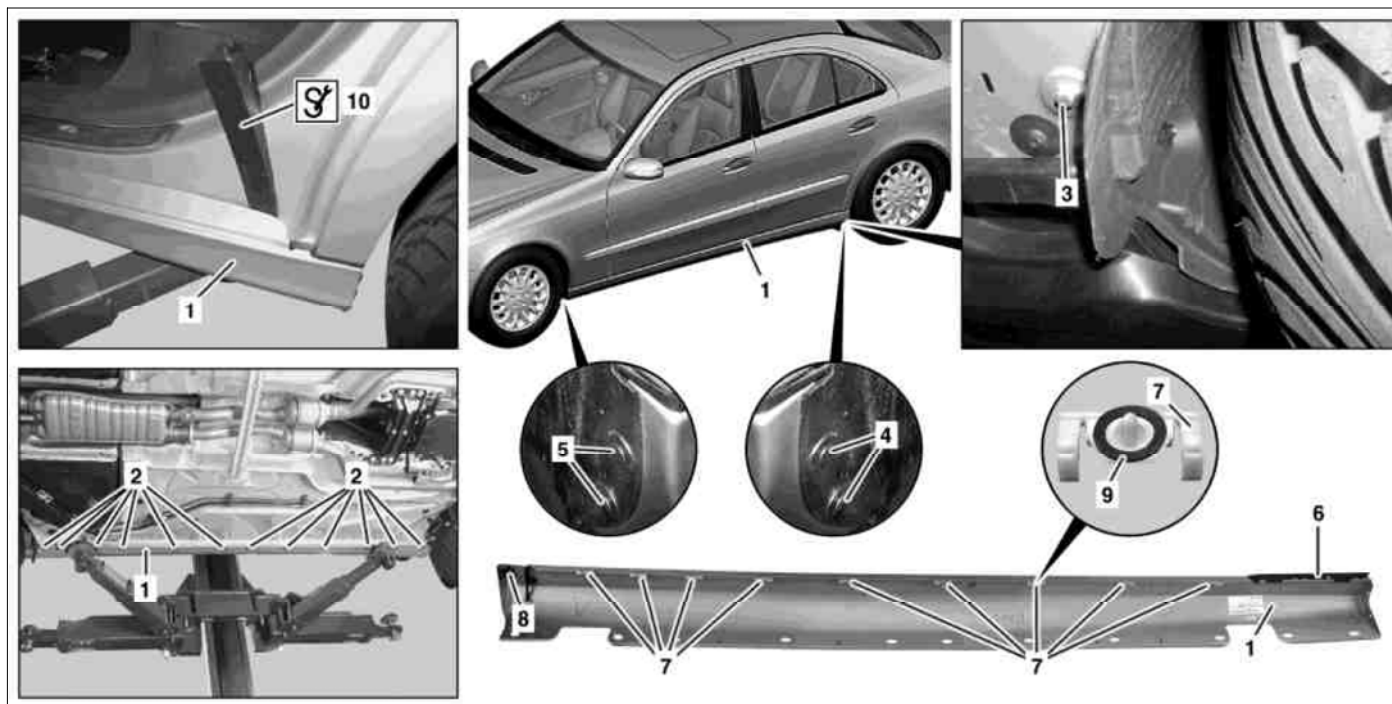

P88.80-2038-09


Shown on model 211.0 on left
longitudinal member paneling

- 1 Longitudinal member paneling
2 Expanding rivets
3 Bolt
4 Expansion rivets

- 5 Expansion rivets
6 Bracket
7 Clip

- 8 Clip
9 Gasket
10 Mounting wedge

	Remove/Install		
1	Remove underbody shield assembly	<p> Remove underbody paneling on left and right side of vehicle, depending on whether the left or right longitudinal member paneling (1) is to be removed. Model 211.0/2/6 Model 211.004/006/016/026/028/042/043 / 061/065/070/076/080/082/083/206/216 / 226/242/243/261/265/270/276/280/282 / 283</p>	AR61.30-P-1001T
2	Remove expansion rivets (2)	Installation: Replace damaged expansion rivets (2)	
3	Unscrew bolt (3) from rear fender liner		
4	Remove expansion rivet (4) from rear fender liner	Installation: Replace damaged expansion rivets (4)	
5	Remove expansion rivet (5) from front fender liner	Installation: Replace damaged expansion rivets (5)	
6	Open front and rear doors		
7	Use mounting wedge (10) to unclip the longitudinal member paneling (1) on bracket (6) and clips (7, 8) from the longitudinal member	<p> Unclip from front to rear.</p> <p> Installation: Install new clips (7). Ensure that longitudinal member paneling (1) is seated correctly on all mounting points on the longitudinal member</p>	*110589035900
8	Install in the reverse order		

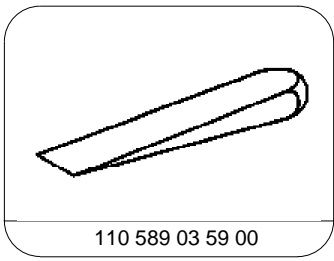

110 589 03 59 00

Mounting wedge