

WIRING DIAGRAMS

Fig. 1: Engine Compartment (Grids 1-4)

1987 Mercedes-Benz 560SEC


For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Tuesday, November 28, 2000 01:38PM

COMPONENT LOCATOR:

A/C COMP CONTROL RELAY .. C-D 27	
ABS ELECTRONIC CONTROL UNIT .. A-C 19	
ABS HYDRAULIC UNIT .. A-C 22-23	
AIR INJECTION RELAY .. F 8	
ALTERNATOR .. B 4	
ANTI-THEFT ALARM CONTROL UNIT .. D 19	
ANTI-TOWING SENSOR .. E 21	
ASPIRATOR BLOWER .. D 23	
AUX WATER PUMP .. D 23	
BATTERY .. A 3	
BLOWER CONTROL UNIT .. B 28	
CENTRAL LOCKING SYSTEM .. E-F 19-21	
CIS-E CONTROL UNIT .. A 6-7	
COMB RELAY .. D-E 16	
COMB SW .. B-D 18	
CONN C100 .. C 3	
CONN C105 .. B 3	
CONN C124 .. E 31	
CONN C161 .. F 15	
CONN C190 .. D 25	
CONN C301 .. E 10-12	
COOLANT TEMP SW .. F 2	
COURTESY LTS .. B-D 30-32	
CRUISE CONTROL AMP .. E 24	
CRUISE CONTROL SW .. E 27	
DIAGNOSTIC CONN .. F 7	
ELECTRONIC FUEL PUMP RELAY .. D 5	
FANFARE/HORN SW .. D 26	
FRONT CIG LTR .. F 30	
FRONT DOME/READING LT .. A 31-32	
FUEL TANK UNIT .. C 47	
FUSE BLOCK .. B-D 11-12/C-E 14-17	
GEAR SELECT SW .. E 8	
HAZARD SW .. E-F 18	
HEADLT WASHER RELAY .. C 4	
HEATED SEATS .. F 33-37	
HIGH SPEED RELAY .. F 4	
HORN SW .. C 26	
IDLE SPEED CONTROL UNIT .. B-C 8	
IGN COIL .. F 5	
IGN CONTROL UNIT .. F 5	
IGN SW .. A 10-12	
INST CLUSTER .. A-F 28	
INST ILLUM CONTROL UNIT .. D 31	
KEY WARNING SW .. F 22	
LEFT FRONT DOOR SW .. D 14	
LEFT SEAT BELT SW (560 SEC) .. F 23	
LIGHT SW .. A 15-17	
OVERVOLTAGE PROTECTION RELAY .. A 5	
POWER ANTENNA .. A 43-44	
POWER MIRRORS .. E-F 38-40	
POWER SEATS .. A-E 33-37	
POWER WINDOWS .. A-D 38-40	
PUSHBUTTON CONTROL UNIT .. A 25-26	
RADIO .. A 45	
REAR CIG LTR (560 SEC) .. F 31	
REAR CIG LTRS (420,560 SEL) .. F 32	
REAR DEFOGGER TIMER RLY .. D 44	
REAR DEFOGGER SW .. E 44	
REAR DOME LT (560 SEC) .. D 31	
REAR SEAT ADJUSTMENTS .. A-B 41-42	
RIGHT FNT DOOR SW .. C 32	
RT/LEFT DOOR SW (560 SEC) .. B 44	
SEATBACK LOCK SWITCHOVER SOL (560 SEC) .. B 31	
SEAT BELT MODULE .. C 43	
SEAT BELT WARNING RELAY .. F 22	
STARTER ASSEMBLY .. A 3	
SUNROOF MOTOR .. E-F 42-43	
SUPPLEMENTAL RESTRAINT SYS (SRS) (560 SEC) .. C-F 41-42	
SUPPLY PUMP .. F 19	
SWITCHOVER VALVE GROUP .. B-C 24	
THROTTLE VALVE SW .. A 8	
TRUNK LT & SW .. A 44	
WARNING MODULE .. E 22	
WASHER MOTOR .. C 2	
WIPER MOTOR .. D 4	

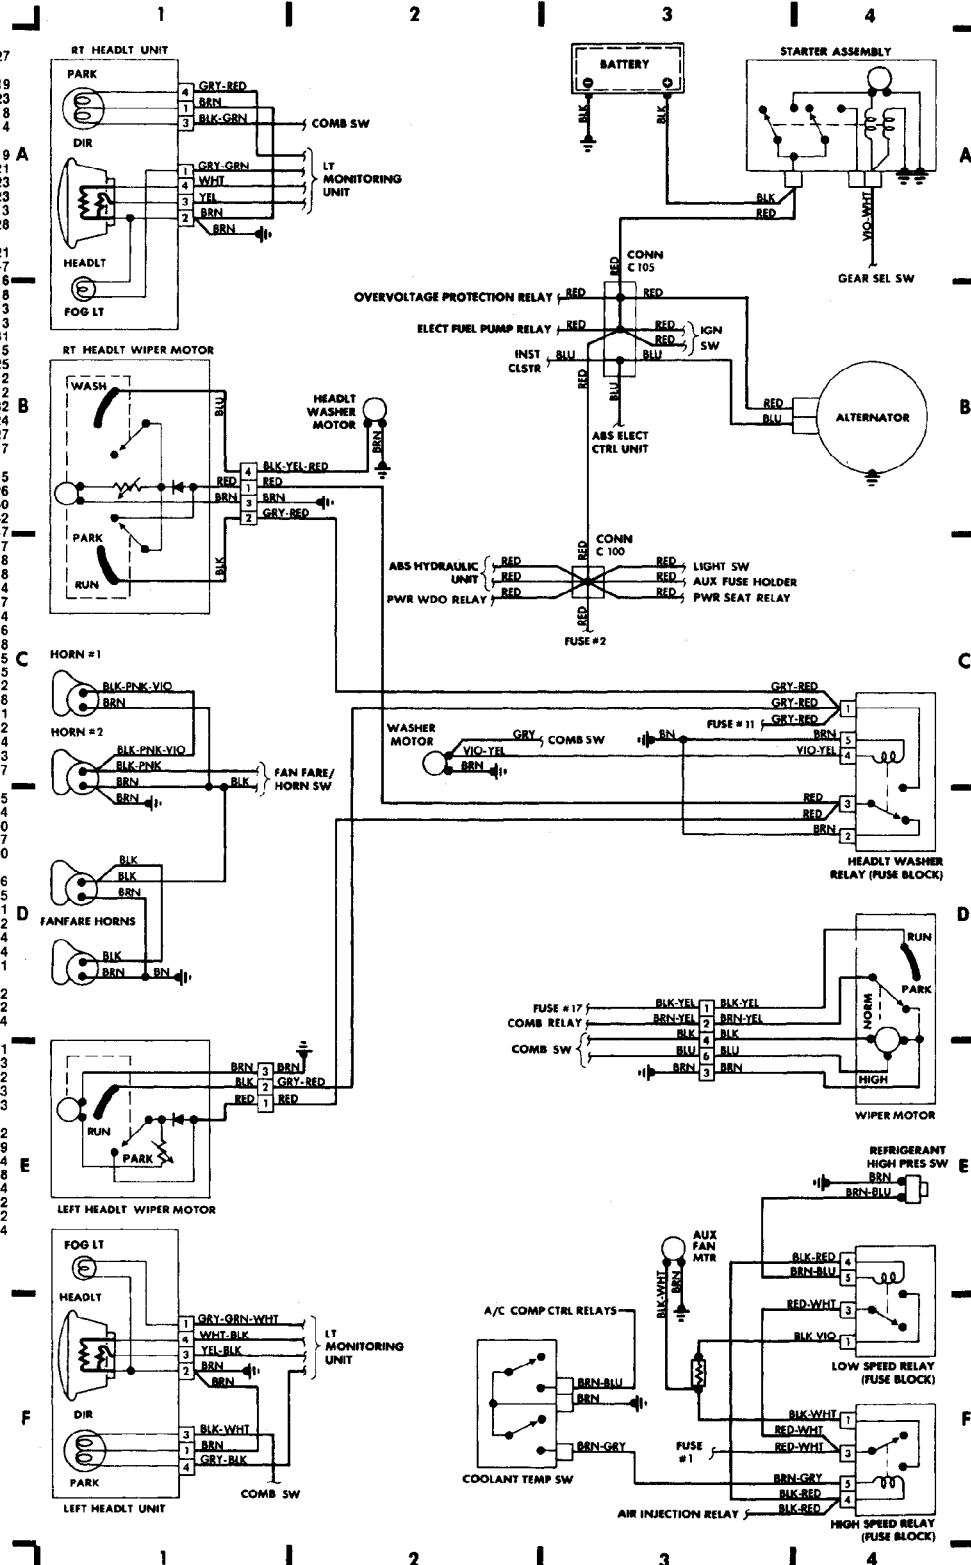

ENGINE COMPARTMENT